

5 3 2 6 REVISION HISTORY DATE DESCRIPTION E 07FEB2020 JCS/DJK PRN: P2020-0235 ATCH STATUS DEFINITION PIN 6 OUTPUT PIN 5 OUTPUT PIN 4 D LATCH STATUS LATCH LED NOTE HANDLE LOCK ELECTRONIC LOCK CONTROL INPUT OPEN COLLECTOR ENCLOSURE SECURED- ACCESS DENIED SECURED OPEN COLLECTOR GND OPEN COLLECTOR ENCLOSURE READY FOR ACCESS ELECTRONICALLY RELEASED BLUE / MAGENTA FLASHING LOW V+ss LOW LOW V+ss ACCESS GAINED - HANDLE LIFTED OR MECHANICALLY UNLOCKED MECHANICALLY RELEASED BLUE FLASHING LOW GND ACCESS GAINED - HANDLE LIFTED - ELECTRONIC LOCK CLOSED I OW OPEN COLLECTOR OPEN COLLECTOR LOW GND HANDLE NOT FULLY CLOSED BLUE / RED FLASHING INTERIM STATES ONLY DURING CLOSING OF HANDLE LOW LOW GND ELECTRONIC SWINGHANDLE MATERIALS H3-EM-66-LLL COMPONENT MATERIAL FINISH NOTE CIRCUT BOARD DETAILS ON REQUEST DETAILS ON REQUEST DETAILS ON REQUEST DETAILS ON REQUEST MOTOR GEAR SHAFT STAINLESS STEEL NATURAL WORM GEAR PA66 1300S NATURAL PINION GEAR POM M90-44 BLACK SPUR GEAR POM M90-44 BLACK GEAR RETAINER PC (LEXAN VO) CLEAR PC ABS (UL94- VO) MOTOR COVER BLACK BLACK (A&B SURFACES VD136) LATCH BODY 30% GF NYLON (UL94- VO) HANDLE MOULDING 30% GF NYLON (UL94- VO) BLACK (A&B SURFACES VD136) LIGHT PIPE PC (LEXAN VO) CLEAR BOTTOM MOUNTING BRACKET 30% GF NYLON (UL94- VO) BLACK 30% GF NYLON (UL94- VO) SLIDE **I**WHITE HANDLE SHAFT DIE CAST ZINC ZINC PLATE BRIGHT CHROMATE ROTATION LIMITER ZINC PLATE BRIGHT CHROMATE 2 SIZE OPTIONS SUPPLIED DIE CAST ZINC TOP MOUNTING BRACKET 30% GF NYLON (UL94- VO) BLACK MOUNTING SCREW 25 LONG STEEL ZINC PLATE + BRIGHT CHROMATE INSTALL WITH #1 POZIDRIV DRIVER MOUNTING SCREW 14 LONG STEEL ZINC PLATE + BRIGHT CHROMATE INSTALL WITH #1 POZIDRIV DRIVER В OUTPUT GEAR MOULDING POM M90-44 BLACK REFLECTOR POM M90-44 OPAQUE WHITE CONNECTING LEAD DETAILS ON REQUEST DETAILS ON REQUEST ORDER SEPERATELY DIN LOCKPLUG DETAILS ON REQUEST DETAILS ON REQUEST OPTIONAL WITHOUT LOCKPLUG LOCK PLUG RETAINING SCREW STEEL ZINC PLATE + BRIGHT CHROMATE + SEALER SHAFT PIN SAE 30302/30304 PLAIN, OILED BLACK NBR RUBBER O-RING GREASED ZINC PLATE + BRIGHT CHROMATE PAWL SCREW STEEL ZINC PLATE + BRIGHT CHROMATE ORDER SEPERATELY STEEL DETAILS ON REQUEST PROXIMITY READER MODULE DETAILS ON REQUEST BLANK PLUG DIE CAST ZINC CHROME PLATE OPTIONAL SLIDE SPRING 302 STAINLESS STEEL NATURAL THIRD ANGLE PROJECTION MILLIMETERS [IN] TOLERANCES UNLESS OTHERWISE NOTED 13-EM ELECTRONIC SWINGHANDLE WITH RFID READER ALL DIMENSIONS WITHOUT WITH WIEGAND DATA OUTPUT, iCLASS UID TOLERANCES ARE FOR REFERENCE ONLY. J-H3-EM-66-100 PROPRIETARY ITEM NX EXCEPT FOR USES EXPRESSLY GRANT IN WRITING, INFORMATION DISCLOS HEREON IS CONFIDENTIAL AND ALL RIGHTS, PATENT AND OTHERWISE, ARE RESERVED BY SOUTHCO, INC. SHEET 4 OF 4 1:1 PER ASME Y14.5M-1994 NAM/WB ¹09SEP2014 5 6 3 2




H3-EM-66-100 Electronic Swinghandle **Operating Instructions**

Package Contents

- H3-EM-66-x00 Electronic Swinghandle with RFID Reader (qty1)
- EM-0-45827 M3x25 POZIDRIV® Mounting Screws (gty 4)
- EM-0-47151 M3x14 POZIDRIV® Mounting Screw (qty 1)
- EM-0-45825 Rotation Limiter (qty 1)
- EM-0-58124 Rotation Limiter (gty1)
- E5-C-04 Pawl Screw (qty 1)
- M3-0-24943-11 Lock Plug Screw (qty 1) (optional)
- EM-0-45826 Top Mounting Bracket (qty 1)
- EM-0-45822 Bottom Mounting Bracket (qty 1)
- Operating Instructions (qty 1)

H3-EM-66-x00 Electronic Swinghandle with RFID Reader

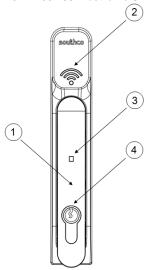

- Handle
- 2. **RFID Reader**
- Tri-Color Status LED 3.
- Lock Plug (optional)

Features

- Installed 13.56MHz RFID reader module with Wiegand data output
- Compatible with 13.56Mhz RFID cards with 4, 7, or 8byte Unique Identifiers (UID)
- Remote lock and unlock capability
- Single or multi-point lock actuation
- Momentary or continuous lock actuation
- Tri-color LED (blue/magenta/red) to indicate lock and handle status
- DIN lock manual override
- Accommodates both left and right doors
- For indoor use only

WARNING: The H3-EM-66-000 is shipped without a lockplug. This product must be paired with a Southco-approved lock to function properly. Use with an unapproved lockplug voids the product warranty. Contact Southco for additional support.

Specifications

Actuator Module

Supply Voltage (V_{SUPPLY}): 12VDC to 24VDC (NOTE: Status LED will blink

red if the supply voltage is out of range.)

Standby Current: 50mA maximum at 12VDC

200mA maximum at 12VDC (with no external Operating Current:

mechanical load applied to handle Stall Current:

1A maximum (at 12VDC, limited to 2 seconds) Operating Transit Time: 1 second maximum (NOTE: Power must be present during transit times. If power is

removed while the lock slide is in transit, it will

complete it's cycle when power is

restored.)

Electronic Unlock Time: 3 seconds minimum

Open Collector Outputs: Rated for V_{SUPPLY}, 100mA maximum load

RFID Reader Module

Supply Voltage (Vcc): 12VDC to 24VDC

Operating Current: 60mA maximum (no external devices

attached)

Transmit Frequency: 13.56MHz DATA Signal Voltage: 5VDC DATA Pulse Interval Time: 40µs DATA Signal Delay: 2ms

Output Format: Reverse Byte Order with Upper and Lower

Parity Bits

Mounting and Installation


Please refer to Southco trade drawing J-H3-EM-66-100 for mounting and installation details.

NOTE: Use a #1 POZIDRIV® driver when installing the mounting screws. See Southco trade drawing J-H3-EM-66-100 for additional details.

Wiring Diagrams

The H3-EM-66-x00 contains two separate functional modules: the actuator module and RFID reader module. The actuator module controls and monitors the locking function of the swinghandle. The RFID module reads the contents of a compatible RFID card and converts it to Wiegand format.


These two modules operate independently of each other and require connection to an access control unit (not provided), as illustrated below, for the entire product to be fully functional.

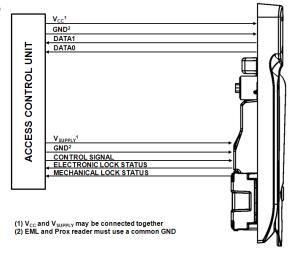




H3-EM-66-100 Electronic Swinghandle Operating Instructions

The actuator module of the swinghandle is accessed with a six-position connector on the rear of the unit, shown below.

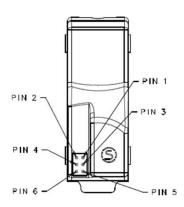

Pin	Description	Note	
1	V_{GND}	ground (must be same as RFID reader module)	
2	V _{SUPPLY}	12 to 24 VDC power supply input (may be connected to RFID reader V _{CC} input)	
3	N/C	no connect	
4	Control Signal	command input (9VDC up to supply voltage, 100 milliseconds minimum)	
5	Electronic Lock Status	open collector output (rated for V _{SUPPLY} , 100mA max. load)	
6	Mechanical Lock Status	open collector output (rated for V _{SUPPLY} , 100mA max. load)	

 The RFID reader module of the swinghandle is accessed with a four-position connector attached to a harness connected to the module's circuit board. The module's connector pinout is:




Pin	Wire Color	Description	Note
1	Black	GND	ground (must be same as actuator
			module)
2	Red	VCC	12 to 24VDC power supply input
			(may be connected to EML V _{SUPPLY}
			input)
3	Green	DATA0	DATA0 output
4	White	DATA1	DATA1 output

▲ NOTE: The mating connectors/harnesses are not provided with the H3-EM-66-x00. Refer to Southco trade drawing J-H3-EM-66-100 for mating connector/harness requirements.

Wiegand Data Output

The RFID module will read the 4, 7, or 8 byte UID from a compatible RFID card, and convert to Wiegand data format in reverse byte order, including upper even parity (Pe) and lower odd parity (Po) bits, as shown below.

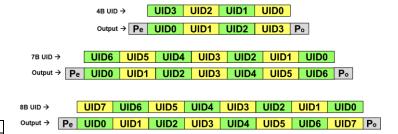

Control Input Signal

This signal is used to control the electronic lock slide position.

- for UNLOCKED position: Supply 9VDC minimum (do not exceed supply voltage) for at least 100 milliseconds. The lock will remain unlocked for as long as the signal is present, or a minimum of 3 seconds. Signal timing can typically be adjusted at the access control device. The control signal current draw is less than 10mA.
- for LOCKED position: Supply an open contact or 0VDC (0 to 0.5V)

Electronic Lock Status Output and Mechanical Lock Status Output Signals

Electronic Lock Status Output Signal

This output will be LOW (GND) when the lock slide is electromechanically moved to the unlocked position. It will be in the open collector state (high-impedance) when in the locked position.

Mechanical Lock Status Output Signal

This output will be LOW (GND) when the handle is in the open position or when the keylock in the actuator is manually unlocked. It will be in the open collector state (high-impedance) when in the secured position.

 $ilde{f \triangle}$ NOTE: These outputs are open collector outputs rated for V_{SUPPLY} with a maximum load of 100mA. To avoid damage to the H3-EM, do not exceed voltage and current ratings.



H3-EM-66-100 Electronic Swinghandle Operating Instructions

Status LED and Output Signals

The latch is equipped with a tri-color (blue/magenta/red) LED visible from the front of the latch. This LED provides a visible notification of the latch status. The different latch states are described below. Please refer to the Control Input Signal, Electronic Lock Status Output Signal, and Mechanical Lock Status Output Signal sections for further details on these signals.

Secured

The latch is securely closed, prohibiting access.

- The Status LED will be solid blue.
- The electronic lock status output is at its open collector state.
- The mechanical lock status output is at its open collector state.

handle secured in housing, cam in locked position



electronic lock slide in locked position

electronic

unlocked

position

lock slide in

"Secured" State

Electronically Released

The electronic lock slide is in the unlocked position and the handle can be pulled open.

- The Status LED will alternate flashing blue/magenta.
- The electronic lock status output is 0V while the lock slide is in the unlocked position.
- The mechanical lock status output is at its open collector state.

handle secured in housing, cam in locked position




"Electronically Released" State

Mechanically Released

The latch is released by opening the handle or moving the cam from its lock position.

- The Status LED will flash blue.
- The electronic lock status output will be at its open collector state
 if the electronic lock slide is in the locked position. It will be 0V if
 the lock slide is in the unlocked position.
- The mechanical lock status output is 0V.

▲ NOTE: The lock sensor is an optical device that senses the presence of the lock pawl. Reflectivity of the lock pawl material can affect sensing. Use only Southco-supplied locks.

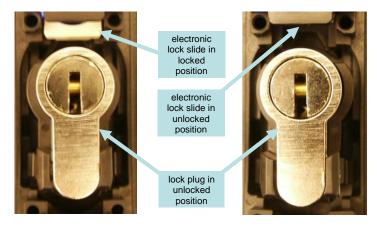


"Mechanically Released" State

Handle not Fully Closed

This is an interim state and may occur while closing the handle when the cam is not secured by the electronic lock slide. The latch is not fully secured during this state.

- The Status LED will alternate flashing blue/red if the cam is not detected. It will flash blue/red/red if the cam is detected, but the lock plate is not in the right position. This could be due to mechanical failure or tampering.
- The electronic lock status output is 0V if the lock slide is in the unlocked position. It will be at its open collector state if it is in the lock position.
- The mechanical lock status output is 0V if the cam is not detected. It will be at its open collector state if it is detected.

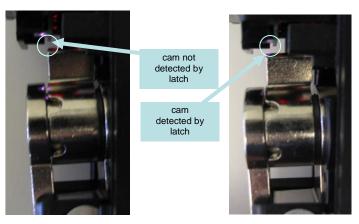

"Handle not Fully Closed" State



H3-EM-66-100 Electronic Swinghandle Operating Instructions

Electronic Lock Slide Error


The electronic lock slide does not respond to the command input signal.

- The Status LED will flash magenta if the latch is secured. It will alternate flashing red/magenta if the latch is mechanically released.
- The electronic lock status output is at its open collector state.
- The mechanical lock status output will be at its open collector state if the cam is in its lock position. It will be 0V if the mechanical key is moved from its lock position.

Error Input Command Sequence

The H3-EM can accept an input command from an external controller to flash the status LED red three times. This feature can be used to indicate that an error event has occurred (e.g. unauthorized access attempt).

The control input signal needs to meet the timing requirements shown below to flash the status LED red.

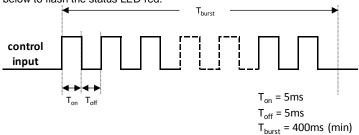

POZIDRIV[®] is a registered trademark of the Phillips Screw Company

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

Industry Canada Compliance Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) this device may not cause interference, and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- 1) l'appareil ne doit pas produire de brouillage, et
- 2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

 ϵ